Cuisinart®

INSTRUCTION BOOKLET



BC

Cordless Rechargeable Multi-Grater

CMG-20

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

CONTENTS

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS**
2. To protect against electrical shock, fire and injury to persons, do not immerse the multi-grater, charging base, cord or plug in water or any other liquid.
3. Do not operate in the presence of explosive and/or flammable fumes.
4. Unplug charger base from outlet before cleaning.
5. Charger base should be plugged into an electrical outlet away from sink or hot surfaces.
6. Do not use appliance for other than intended use.
7. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been dropped or damaged in any way, or is not operating properly. Return the appliance to the nearest Cuisinart Repair Center for examination, repair, mechanical or electrical adjustment.
8. The use of attachments or accessories not recommended by Cuisinart may cause fire, electrical shock or risk of injury.
9. This appliance is intended for household use only and not for commercial or industrial use.
10. This product contains nickel-metal hydride batteries, which must be recycled at the end of the batteries' life. (Please see Battery Safety and Disposal section). Do not incinerate or compost batteries, as they will combust at high temperatures.
11. Do not incinerate the multi-grater, even if it is severely damaged. The batteries can explode in a fire.
12. Leaks from battery cells can occur under extreme conditions. If the liquid, which is a 20–35% solution of potassium hydroxide, gets on the skin, (1) wash quickly with soap and water or (2) neutralize with a mild acid such as lemon juice or vinegar. If the liquid gets into eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention.
13. Close supervision is necessary when any appliance is used by or near children.
14. Do not remove or add parts while operating the unit.
15. Avoid contact with moving parts. Your Cuisinart® Multi-Grater is built with an extra-large handle opening. Be sure to always keep away from rotating drum while in use.
16. Blades are sharp. Handle carefully. Always handle processing drums by the plastic ends.
17. Do not use outdoors. Do not use with an extension cord. Plug charger directly into an electric outlet. Use only with the charger provided with the appliance. Do not attempt to use this charger with any other product. Likewise, do not attempt to charge this appliance with any other charger.
18. Do not let cord hang over edge of table or counter. Do not let cord come in contact with hot surfaces including the stove.
19. Do not operate your appliance in an appliance garage or under a wall cabinet. When storing in an appliance garage always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

CAUTION

Opening the main unit automatically voids the warranty.

Maximum rating is based on the slicing drum attachment that draws the greatest power. Other recommended attachments may draw significantly less power.

ADDITIONAL SAFETY TIPS

1. Do not attempt to open the multi-grater or the charging base. Doing so will automatically void warranty.
2. Batteries are not replaceable. When batteries reach the end of their life, the unit must be disposed of in accordance with the laws and regulations in your area governing disposal of such cell types. Please refer to Battery Safety and Disposal.
3. Do not operate the unit on the charging base. Doing so may cause damage to the unit or the battery and voids warranty.
4. Before removing or adding accessories, lift the pusher handle from the main body to prevent accidentally activating the motor.

CONSUMER SAFETY INFORMATION

This product contains a UL listed transformer. DO NOT dispose of the unit or the battery in household waste bins. DO NOT disassemble, crush or puncture the battery in any fashion.

FEATURES AND BENEFITS

1. **Cordless Operation**

   No cord! Operates on rechargeable battery power.

2. **Easy to Recharge**

   a. Rechargeable batteries do not need to be removed in order to recharge.

   b. Charger base cord, which you insert into back of charger base, plugs into your standard outlet.

   c. Charging/storage base recharges the multi-grater's batteries while elegantly displaying the unit. When fully charged, the multi-grater will operate continually for 20 minutes – a regular grating operation is just 5–10 seconds.

3. **Comfortable Design**

   The multi-grater is designed to make grating, slicing and shredding your favorite foods faster, and make it easier, as well. The handle design offers comfortable control and easy access to the power button

4. **One Step ON/OFF (Power) Button**

   Press and hold the ON/OFF button to operate the multi-grater. Release button to stop motor. For best results, do not use short pulses.

5. **Grating, Slicing and Shredding Capabilities**


   The Cuisinart® Cordless Rechargeable Multi-Grater allows you to shred vegetables, slice fruits and grate your favorite cheese or chocolate with just the change of a drum.

6. **Extra-Large Handle Opening**

   Accomodates large pieces of food for continuous and generous servings.

GETTING TO KNOW YOUR MULTI-GRATER

1. Handle	5. Grating Drum	9. Left Hopper Cover
2. Main Body	6. Pusher	10. Hopper
3. Shredding Drum	7. Charging/Storage Base	11. Right Hopper Cover
4. Slicing Drum	8. Charger LED	12. Drum Cover

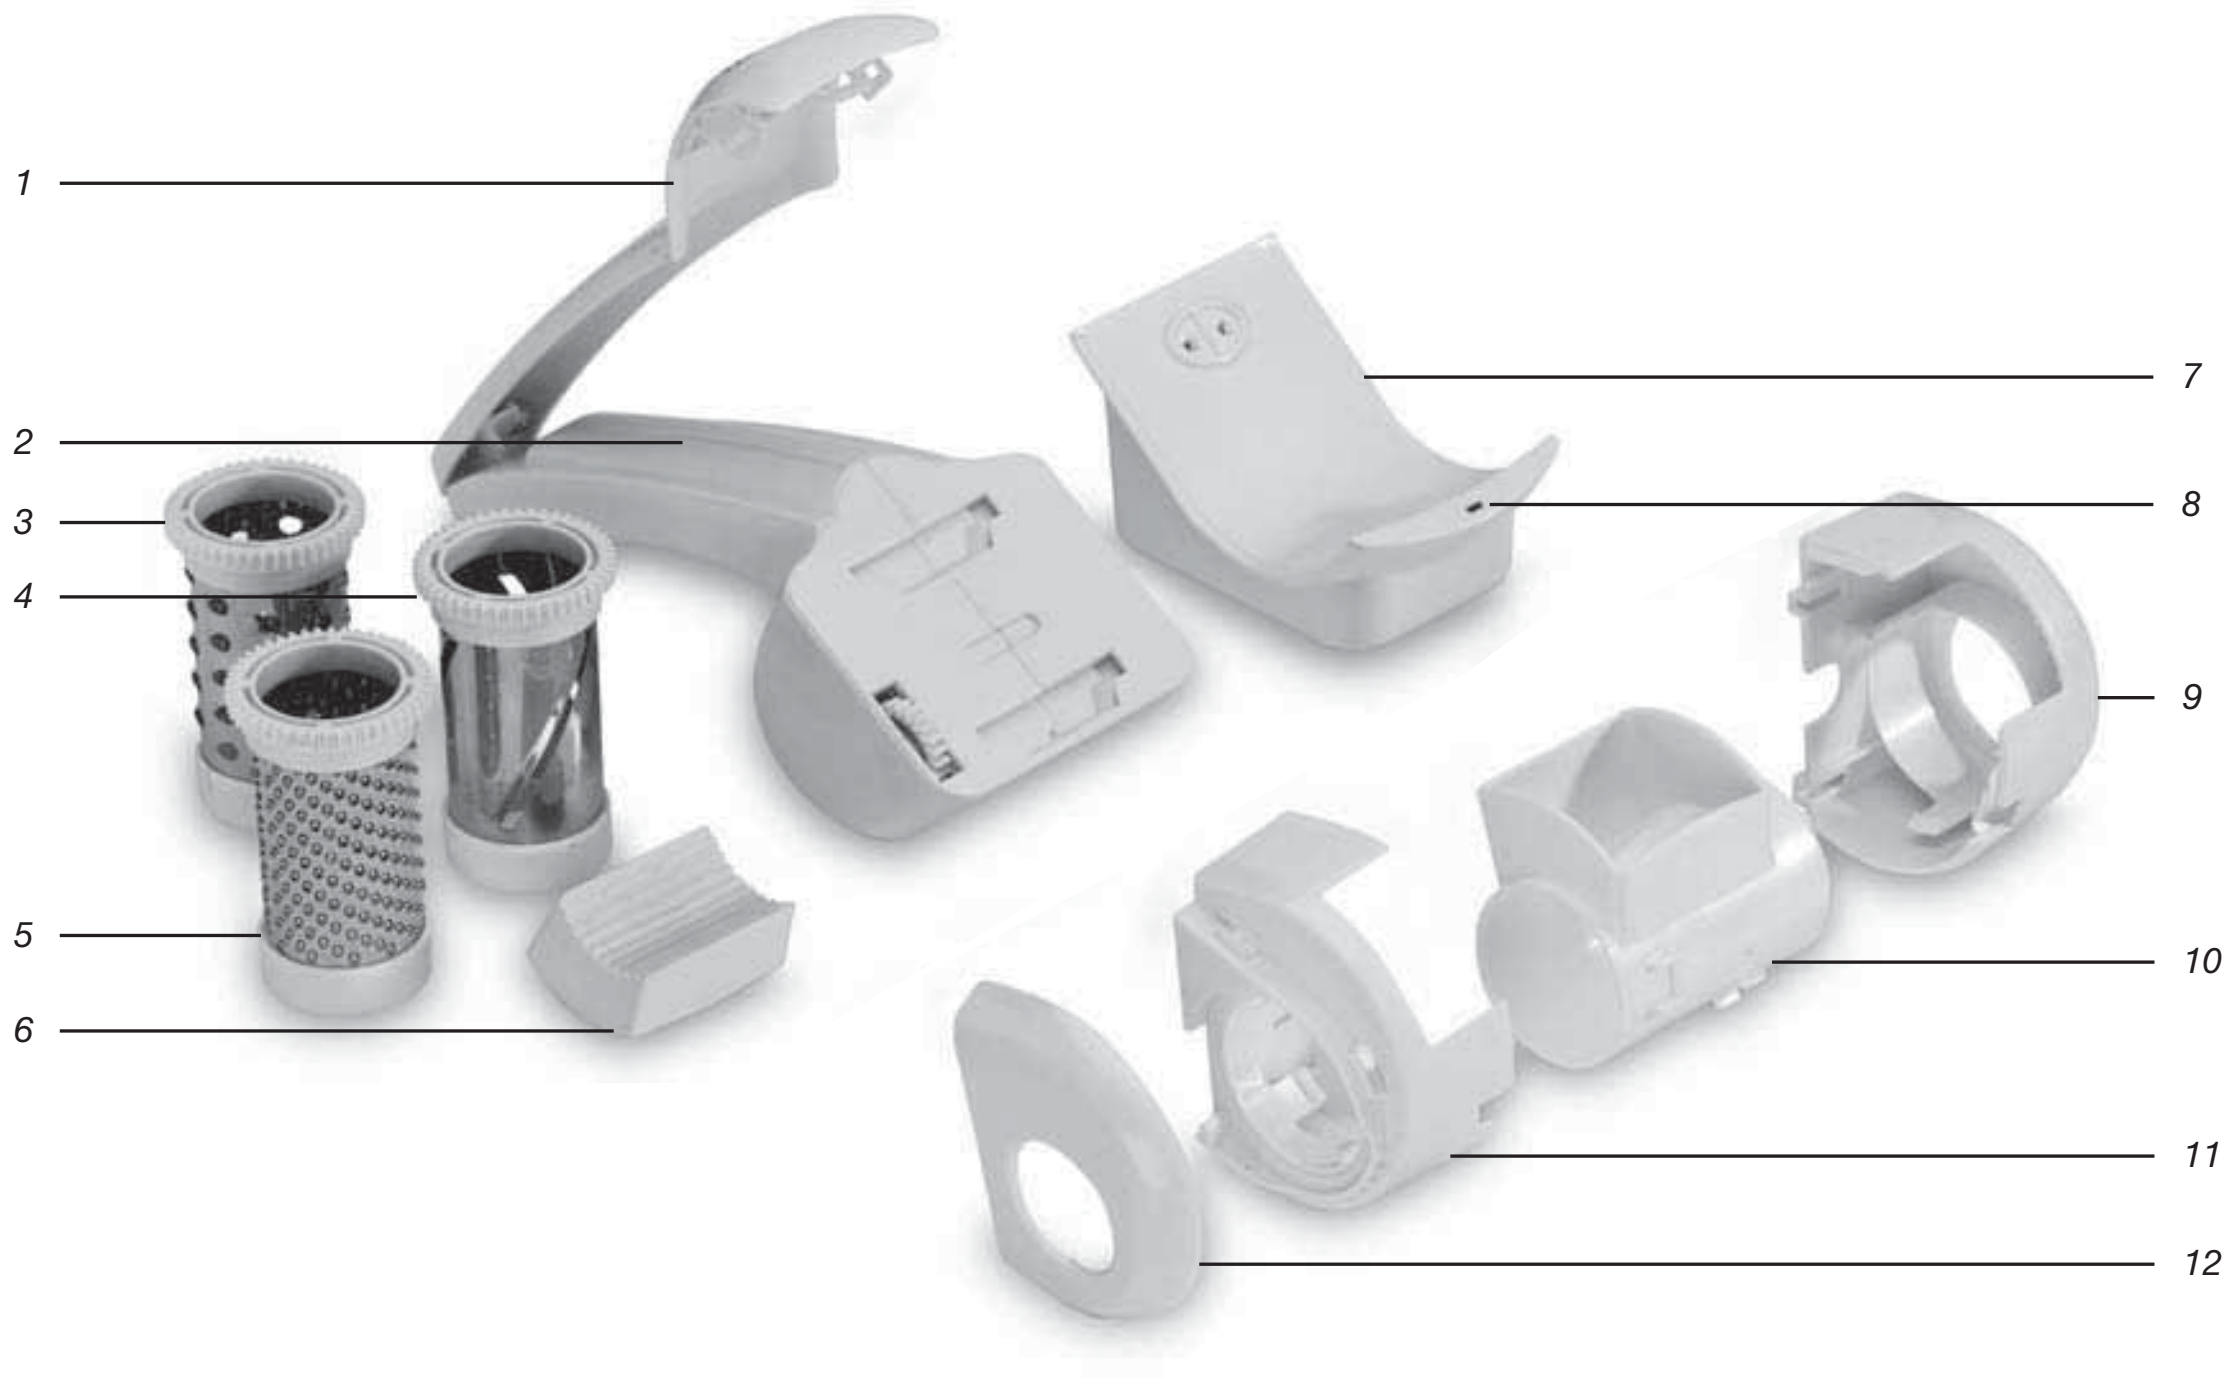

BEFORE FIRST USE

Place the package containing the Cuisinart® Cordless Rechargeable Multi-Grater on a sturdy surface and unpack all pieces, being sure to remove all packaging materials from in and around the unit.

To remove any dust that may have accumulated during packaging, wipe the charging base and main body with a clean, damp cloth.

The 3 drums, drum cover, hopper assembly and pusher can all be removed from the unit and washed with warm soapy water or placed on top rack of dishwasher.


Be sure to rinse and dry thoroughly.


Read all instructions completely for detailed operating procedures.

ASSEMBLING YOUR MULTI-GRATER


After your multi-grater has been thoroughly cleaned, be sure it is properly assembled before using.


1. Be sure that all parts are completely dry prior to assembly.
2. Insert the hopper into the left hopper cover, lining up the 2 tabs. It will click into place.
3. Attach the right hopper cover, ensuring it clicks to lock into place.
4. Attach the hopper assembly to the main body of the unit by inserting the tabs on the bottom of hopper assembly into the open slots on the main body.
5. Slide away from the handle to secure.

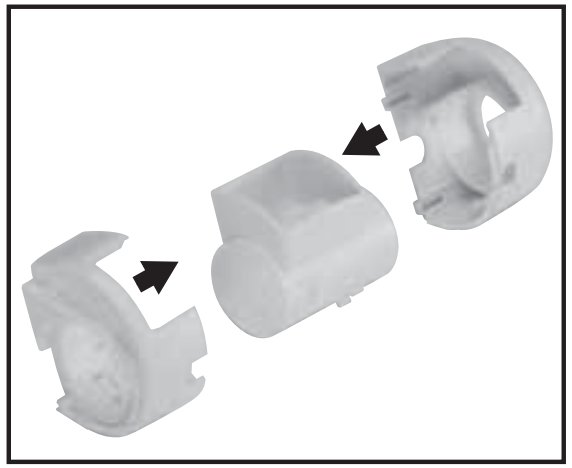


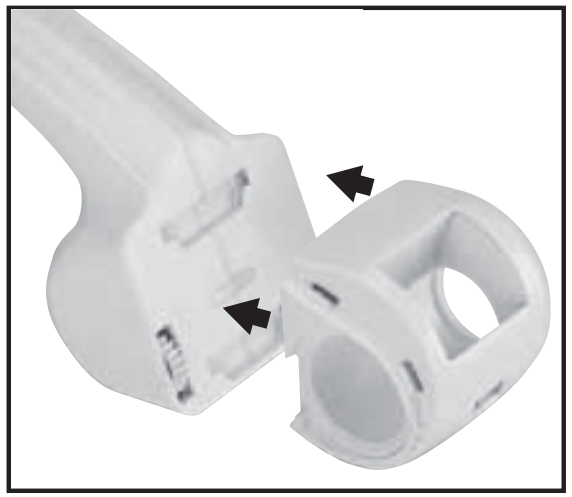

6. Insert the desired processing drum into the hopper, being sure the end with gear is facing out.
7. Slide the drum cover into position.
8. Attach the food pusher to the handle, pressing it firmly into place.
9. Your multi-grater is now ready to charge.

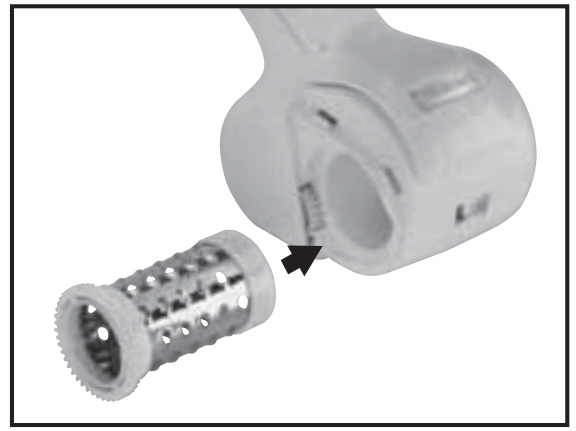

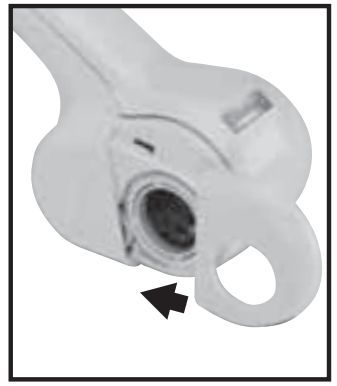

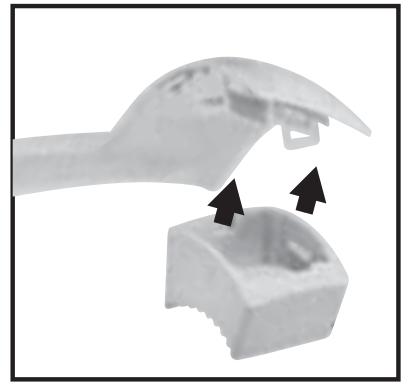

CHARGING YOUR MULTI-GRATER

NOTE: The batteries included in this unit are not charged. Before initial use, the batteries must be charged for 24 hours to insure maximum operating capability. For best performance, fully discharge and recharge the battery 3 times before first use.

1. Ensure the multi-grater is properly assembled.
2. Attach the DC plug of the charger to the charging base.
3. Place assembled multi-grater onto charging base, ensuring the multi-grater locks into place.
4. Plug charger into a 120V - 60Hz AC outlet only.
5. The red light will illuminate to indicate the main unit has been correctly placed on charging base and that it's accepting a charge. If the red light is not illuminated, lift and reposition unit on the charging base.
6. If after repositioning, the red light is still not illuminated, check to ensure that the power cord is securely plugged into outlet and the DC plug is securely plugged into the charging base.

   If problem persists, please contact our Customer Service Center at 1-800-726-0190 to have your multi-grater replaced.

NOTE: To ensure the longest battery life, unit must be charged for a minimum of 24 hours for the initial charge.

WARNING

Do not immerse, charging base or main body in water or any other liquid. Do not use harsh or abrasive cleansers on any part of the appliance.

CONTINUOUS CHARGING

The unit is designed so that the batteries may remain on continuous charge. It is recommended that the Cuisinart Cordless Rechargeable Multi-Grater charger be kept plugged into a wall socket so that the grater will always be ready to use. Leaving the unit on continuous charge is inexpensive in terms of the amount of electricity consumed.

Use only with the charger provided with the appliance. Do not attempt to use this charger with any other product. Likewise, do not attempt to charge this appliance with any other charger.

HOLDING A CHARGE

The batteries hold most of their charge even when not plugged in and charging, losing only about 30% of total charge per month.

SHORT RUN TIMES

If, after repeated use, the run time seems to get shorter and the multi-grater has less power, remove the plug from the wall outlet and continue to use the grater until it is fully discharged and stops operating. Plug base back into wall outlet and recharge the unit for 16 hours or overnight for a full new charge. This procedure improves battery capacity and should be repeated once every 2 to 3 months to ensure optimum performance.

OPERATING INSTRUCTIONS

Grating, Shredding and Slicing

NOTE: Before initial use, be sure the batteries have been charged for no less than 24 hours

1. Ensure that your multi-grater has been appropriately assembled, with the hopper attached to the main body and the food pusher attached to the handle.
2. Insert the desired processing drum into the hopper. Refer to the section Tips for Using Your Cordless Rechargeable Multi-Grater on page 8 and for suggested uses for each drum.
3. Place the drum cover onto the side of the hopper to secure the drum in place.
4. Lift the handle from the main body and place your chosen food into the hopper and lower the handle, being sure that the piece inserted is sized appropriately. If the piece of food is too large, it may prevent the unit's handle from lowering far enough to initiate power.

CAUTION: To reduce the risk of injury to persons, and /or damage to the unit, keep hands, hair, clothing and any utensils away from the moving parts during operation. Never touch the hopper or drums during operation.

SUGGESTED USES	
 Grating Drum	**Hard Cheeses:** (Parmigiano Reggiano), Asiago, Grana Padano, Manchego **Peppercorns** **Coriander** **Nutmeg** **Pecans** **Chocolate** **Almonds** **And More!**
 Shredding Drum	**Softer Cheeses:** Cheddar, Fontina, Pepper Jack, Taleggio, Havarti **Carrots** **Chocolate** **Zucchini** **Turnips** **Beets** **Ginger** **Garlic** **And More!**
 Slicing Drum	**Hard Cheeses:** (Parmigiano Reggiano), Asiago, Grana Padano, Manchego **Chocolate** **Zucchini** **Garlic** **Yellow Squash** **Radishes** **Almonds (shaved)** **And More!**

TIPS FOR USING YOUR CORDLESS RECHARGEABLE MULTI-GRATER

- The Cordless Rechargeable Multi-Grater allows you to effortlessly grate cheese right at the table. Perfect for entertaining!
- Be sure to clean unit thoroughly after each use.
- The Cordless Rechargeable Multi-Grater is perfect for spices and hard cheeses, nuts and chocolate.
- The shredding drum is recommended when using softer cheeses such as Cheddar, American or Swiss. For best results, use well-chilled cheese. Softer cheeses that are room temperature or above will not shred very well.
- When preparing hard cheeses, such as Parmesan and Romano, all three drums types will be effective. Choose the drum best suited for your recipe.
- Add that special touch to your desserts by using soft chocolate with the slicing drum to create chocolate curls.
- Use the grating drum with hard chocolates to add a sprinkle of fine chocolate to beverages or desserts.
- The grating drum works well with nuts, such as almonds or walnuts, which are a delicious addition to salads and desserts.
- To improve battery performance, it is recommended that you occasionally remove the plug from the wall outlet and continue to use the grater until it is fully discharged and stops operating. Plug base back into wall outlet and recharge the unit for 16 hours or overnight for a full new charge. This procedure improves battery capacity and should be repeated once every 2 to 3 months to ensure optimum performance.

CLEANING AND MAINTENANCE

Be sure to remove the drum from unit after each use, wash with warm soapy water, rinse and dry thoroughly or place on top rack of dishwasher.

Simply wipe the charging base and main body with a damp cloth then dry thoroughly. Do not place in the dishwasher. Avoid wetting battery contacts.

Any other servicing should be performed by an authorized service representative.

This appliance should only be used with the battery and charging base provided in this package.

BATTERY SAFETY AND DISPOSAL

This product contains a sealed nickel-metal hydride battery. DO NOT dispose of either the product or the battery in a fire. Dispose of the nickel-metal hydride battery in accordance with the laws and regulations in your area governing disposal of such cell types.

When unit reaches the end of its life, it must not be disposed of in standard household waste. Your local authority will have a center that accepts such waste for recycling or disposal. Please check local regulations for information about the disposal of electronic products in your area.

LIMITED 3-YEAR WARRANTY

This warranty is available to consumers only. You are a consumer if you own a Cuisinart® Cordless Rechargeable Multi-Grater that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners.

We warrant that your Cuisinart® Cordless Rechargeable Multi-Grater will be free of defects in materials and workmanship under normal home use for 3 years from the date of original purchase.

We recommend that you visit our website, www.cuisinart.com for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

If your Cuisinart® Cordless Rechargeable Multi-Grater should prove to be defective within the warranty period, we will repair it, or if we think necessary, replace it. To obtain warranty service, simply call our toll-free number 1-800-726-0190 for additional information from our Customer Service Representatives, or send the defective product to Customer Service at Cuisinart, 7475 North Glen Harbor Blvd., Glendale, AZ 85307.

To facilitate the speed and accuracy of your return, please enclose $10.00 for shipping and handling of the product.

Please pay by check or money order (California residents need only supply proof of purchase and should call 1-800-726-0190 for shipping instructions).

NOTE: For added protection and secure handling of any Cuisinart® product that is being returned, we recommend you use a traceable, insured delivery service. Cuisinart cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty. Please be sure to include your return address, daytime phone number, description of the product defect, product model number (located on bottom of product), original date of purchase, and any other information pertinent to the product's return.

CALIFORNIA RESIDENTS ONLY:

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail store that sells Cuisinart® products of the same type.

The retail store shall then, at its discretion, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility if service or repair can be economically accomplished. Cuisinart and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty.

California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair, or if necessary, replacement, by calling our Consumer Service Center toll-free at 1-800-726-0190.

Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such products under warranty.

BEFORE RETURNING YOUR CUISINART® PRODUCT

If you are experiencing problems with your Cuisinart® product, we suggest that you call our Cuisinart® Service Center at 1-800-726-0190 before returning the product to be serviced. If servicing is needed, a Representative can confirm whether the product is under warranty and direct you to the nearest service location.

Your Cuisinart® Cordless Rechargeable Multi-Grater has been manufactured to the strictest specifications and has been designed for use only in 120 volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as use with accessories, replacement parts or repair service other than those authorized by Cuisinart. This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary household use. This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so these exclusions may not apply to you. You may also have other rights, which vary from state to state

Important: If the nonconforming product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at 1-800-726-0190 to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and the product is still under warranty.

NOTES:

NOTES:

150 Milford Road
East Windsor, NJ 08520
Printed in China
14CE005912
U IB-10463-ESP

NOTAS:

150 Milford Road
East Windsor, NJ 08520
Impreso en China
14CE005912
U IB-10463-ESP

NOTAS:

GARANTÍA LIMITADA DE 3 AÑOS

Esta garantía es para los consumidores solamente. Usted es un consumidor si ha comprado su aparato Cuisinart® en una tienda, para uso personal o casero. A excepción de los estados donde la ley lo permita, esta garantía no es para los detallistas u otros comerciantes.

Cuisinart garantiza este aparato contra todo defecto de materiales o fabricación durante 3 años después de la fecha de compra original, siempre que el aparato haya sido utilizado para uso doméstico y según las instrucciones.

Le aconsejamos que llene el formulario de registro disponible en www.cuisinart.com a fin de facilitar la verificación de la fecha de compra original. Sin embargo, registrar el producto no es necesario para recibir servicio bajo esta garantía. En ausencia del recibo de compra, el período de garantía será calculado a partir de la fecha de fabricación.

Si este aparato presentara algún defecto de materiales o fabricación durante el período de garantía, la reparemos o reemplazaremos (a nuestra opción). Para obtener servicio bajo esta garantía, llame a nuestra línea directa gratuita al 1-800-726-0190 o regrese el aparato defectuoso a: Cuisinart, Service Department, 7475 North Glen Harbor Blvd.

Regrese el aparato defectuoso, junto con su recibo de compra y un cheque o giro postal de US$10.00 por gastos de manejo y envío.

Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-726-0190 para recibir instrucciones de envío.

NOTA: para mayor seguridad, le aconsejamos que mande su paquete por un método de entrega con seguro y seguimiento. Cuisinart no será responsable por los daños ocurridos durante el transporte o por los paquetes mandados a una dirección equivocada. Los productos perdidos y/o lastimados durante el envío no serán cubiertos bajo esta garantía. Recuerde incluir su nombre, dirección y teléfono, la descripción del problema, así como cualquier información pertinente.

RESIDENTES DE CALIFORNIA SOLAMENTE

La ley del estado de California ofrece dos opciones bajo el período de garantía. Los residentes del estado de California pueden (A) regresar el producto defectuoso a la tienda donde lo compraron o (B) a otra tienda que venda productos Cuisinart® de este tipo.

La tienda, a su opción, reparará el producto, referirá el consumidor a un centro de servicio independiente, cambiará el producto o reembolsará el consumidor por el precio original del producto, menos la cantidad imputable al uso del producto por el consumidor hasta que éste se dañe. Si estas dos opciones no satisfacen al consumidor, podrá llevar el producto a un centro de servicio independiente, siempre que se pueda ajustar o reparar el producto de manera económica. Cuisinart será responsable por los gastos de servicio, reparación, reemplazo o reembolso de los productos defectuosos durante el período de garantía.

Los residentes de California también pueden, si lo desean, mandar el aparato defectuoso directamente a Cuisinart para que lo reparen o lo cambien. Para esto, se debe llamar a nuestro servicio posventa al 1-800-726-0190.

Cuisinart será responsable por los gastos de reparación, reemplazo, manejo y envío de los productos defectuosos durante el período de garantía.

ANTES DE HACER REPARAR SU APARATO

Si su aparato tiene algún problema, le recomendamos que llame a nuestro servicio posventa al 1-800-726-0190 antes de regresar el aparato a Cuisinart. Un representante le confirmará si su aparato sigue bajo garantía y le indicará la dirección del centro de servicio más cercano.

Este aparato satisface las más altas exigencias de fabricación y ha sido diseñado para uso sobre corriente de 120V, usando accesorios y piezas de repuesto autorizados solamente. Esta garantía excluye expresamente los daños causados por accesorios, piezas o reparaciones no autorizados por Cuisinart, así como los daños causados por el uso de un convertidor de voltaje. Esta garantía no cubre el uso institucional o comercial del producto, y no es válida en caso de daños causados por mal uso, negligencia o accidente. Esta garantía excluye expresamente todos los daños incidentales o consecuentes. Algunos Estados no permiten la exclusión o limitación de daños incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted. Usted puede tener otros derechos que varían de un Estado a otro.

Importante: si debe llevar el aparato defectuoso a un centro de servicio no autorizado, por favor informe al personal del centro de servicio que deberían llamar al servicio posventa de Cuisinart al 1-800-726-0190 a fin de diagnosticar el problema correctamente, usar las piezas correctas para repararlo y asegurarse de que el producto esté bajo garantía.

LIMPIEZA Y MANTENIMIENTO

Después de cada uso, limpie los tambores en agua jabonosa tibia, enjuáguelos y permita que sequen (o póngalos en la bandeja superior del lavavajillas).

Simplemente limpie la base de carga y el cuerpo del aparato con un paño ligeramente humedecido y séquelos bien. No los meta al lavavajillas. Evite mojar los contactos de las baterías.

Cualquier otro servicio debe ser realizado por un técnico autorizado.

Solamente use este aparato con el cargador, la batería y la base proveídos.

RECICLAJE DE LAS BATERÍAS

Este aparato contiene una batería de níquel e hidruro metálico (NiMH). NO tire el aparato o las baterías a la basura. Las batería de níquel e hidruro metálico deben ser recicladas, según las leyes vigentes, al final de su vida útil.

No deben tirarse a la basura. Puede que haya un centro que acepta este tipo de residuos para su reciclaje o eliminación en su lugar de residencia. Para más información acerca del reciclaje de los aparatos eléctricos, comuníquese con las autoridades locales en materia de reciclaje y eliminación de desechos.

USOS SUGERIDOS

 Tambor rallador	**Quesos duros:** Parmigiano Reggiano, Asiago, Grana Padano, Manchego **Granos de pimienta** **Semillas de cilantro** **Nuez moscada** **Pacanas** **Chocolate** **Almendras** **¡y mucho más!**
 Tambor triturador	**Quesos semi-duros:** Cheddar, Fontina, Pepper Jack, Taleggio, Havarti **Zanahorias** **Chocolate** **Calabacines** **Chirivías** **Remolachas** **Jengibre** **Ajo** **¡y mucho más!**
 Tambor rebanador	**Quesos duros:** Parmigiano Reggiano, Asiago, Grana Padano, Manchego **Chocolate** **Calabacines** **Ajo** **Calabacín amarillo** **Rábanos** **Almendras (en láminas)** **¡y mucho más!**

CONSEJOS

- El rallador multiuso recargable/inalámbrico le permite rallar queso directamente en los platos. ¡Es perfecto cuando tiene invitados!
- Cerciórese de limpiar la unidad cuidadosamente después de cada uso.
- El rallador multiuso recargable/inalámbrico es ideal para rallar especias, quesos duros, nueces y chocolate.
- Se aconseja usar el tambor triturador para triturar los quesos semi-duros, como el queso Cheddar, el queso americano o el queso suizo. Para mejores resultados, utilice queso muy frío. No le aconsejamos que intente triturar quesos suaves o a temperatura ambiente; no obtendrá buenos resultados.
- Cualquiera de los tambores puede usarse para rallar/triturar/rebanar el queso duro, como el queso Parmesano o Romano. Elija el tambor más adecuado para su receta.
- De un toque especial a sus postres con virutas de chocolate, usando el tambor rebanador.
- Utilice el tambor rallador para rallar chocolates duros para usar en bebidas o postres.
- El tambor rallador es perfecto para rallar nueces y almendras para añadir a sus ensaladas o postres.
- Para mejorar el rendimiento de las baterías recargables, le aconsejamos que de vez en cuando, utilice el rallador hasta que las baterías estén completamente descargadas. Después, vuelva a conectar la base de carga a la toma de corriente y cargue el aparato durante 12–16 horas. Para mejorar la capacidad de carga de las baterías, le aconsejamos que haga esto cada 2–3 meses.

Si esto no soluciona el problema, llame a nuestro servicio de atención al cliente al 1-800-726-0190 para conseguir un nuevo rallador multiuso.

NOTA: para mejorar la capacidad de carga de las baterías, cerciórese de cargar el aparato durante 24 horas antes del primer uso.

ADVERTENCIA

No sumerja la base de carga o el cuerpo del aparato en agua u otro líquido. No utilice productos o materiales abrasivos para limpiar el aparato.

CARGA CONTINUA

Este aparato ha sido diseñado para poder mantenerse cargando. Le aconsejamos que siempre deje la base de carga conectada a la toma de corriente; de esta manera, su rallador siempre estará listo. La base de carga no consume mucha electricidad y no notará una diferencia en su factura eléctrica.

Utilice el adaptador y la base de carga proveídos únicamente. No intente utilizar la base de carga con otro producto. Tampoco intente cargar este producto con otra base de carga.

MANTENIMIENTO DE LA CARGA

Las baterías mantienen la carga aunque el aparato no está enchufado y cargando, perdiendo aproximadamente el 30% de la carga total por mes.

TIEMPO DE FUNCIONAMIENTO REDUCIDO

Si, después de usar el aparato repetidamente, el tiempo de funcionamiento parece ser más corto y el rallador tiene menos potencia, desconecte la base de carga y haga funcionar el rallador hasta que esté completamente descargado. Después, vuelva a conectar la base de carga a la toma de corriente y cargue el aparato durante 12–16 horas. Para mejorar la capacidad de carga de las baterías, le aconsejamos que haga esto cada 2–3 meses.

INSTRUCCIONES DE OPERACIÓN

Cómo rallar, triturar y rebanar

NOTA: antes del primer uso, cerciórese de cargar el aparato durante por lo menos 24 horas.

1. Asegúrese de que el aparato esté debidamente ensamblado, con la tolva conectada a la unidad principal, y el empujador conectado al mango.
2. Introduzca el tambor deseado en la tolva. Véase la sección "Usos sugeridos" en la página siguiente para más información.
3. Coloque la cubierta del tambor sobre el mismo para sujetarlo.
4. Abra el mango y coloque el alimento deseado en la tolva; cierre el mango. Asegúrese de que el alimento no esté demasiado grande, o impedirá que el mango cierre debidamente. Si esto ocurriera, el aparato no se pondrá en marcha.

PRECAUCIÓN: Para evitar el riesgo de heridas y/o daños al aparato, mantenga los dedos, cabello, ropa, espátulas y otros utensilios lejos de las piezas móviles durante el funcionamiento. Nunca toque la tolva ni el tambor durante el funcionamiento.

ANTES DEL PRIMER USO

Coloque la caja sobre una superficie llana y segura y retire todas las piezas de la caja, cerciorándose de quitar todas las etiquetas y retirar el material de embalaje.

Limpie la base de carga y el cuerpo del aparato con un paño limpio ligeramente humedecido para eliminar el polvo y otros residuos acumulados durante la fabricación y el transporte.

Lave los tambores, la cubierta del tambor, la tolva y el empujador en agua jabonosa tibia, o en la bandeja superior del lavavajillas.


Enjuague y seque todas las piezas.

Lea cuidadosamente las instrucciones antes de usar el aparato.


INSTRUCCIONES DE ENSAMBLAJE

Una vez limpio, cerciórese de ensamblar el aparato debidamente.


1. Asegúrese de que todas las piezas estén completamente secas antes de ensamblar el aparato.
2. Introduzca la tolva en el lado izquierdo de la cubierta de la tolva, alineando las dos patas; encajará, haciendo un "clic".
3. Conecte el lado derecho de la cubierta de la tolva, cerciorándose que encaje, haciendo un "clic".

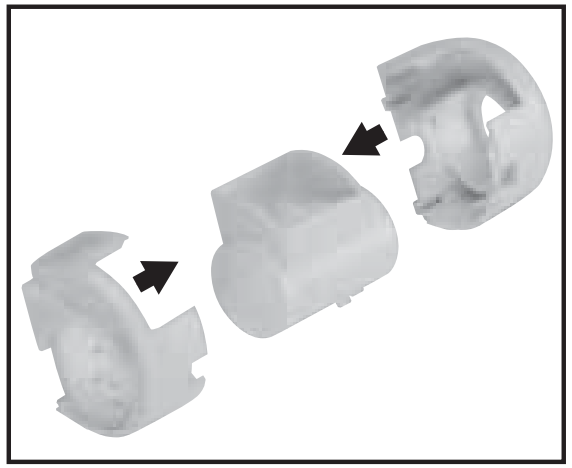



4. Instale la tolva ensamblada sobre la unidad principal, introduciendo las patas debajo de la tolva en las hendiduras en el cuerpo.
5. Deslícela hacia abajo para sujetar.

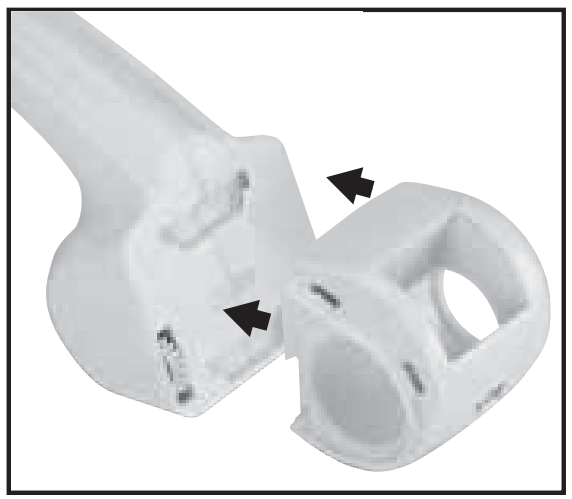

6. Introduzca el tambor deseado adentro de la tolva, cerciorándose que el lado abierto apunte hacia afuera.
7. Deslice la cubierta del tambor sobre el mismo.
8. Conecte el empujador al mango, presionando firmemente hasta que encaje.
9. Su rallador multifunción está listo para cargar.

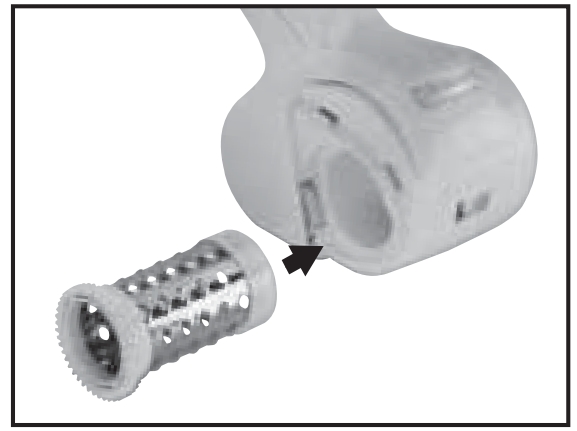

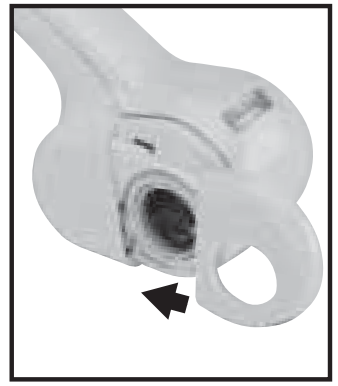

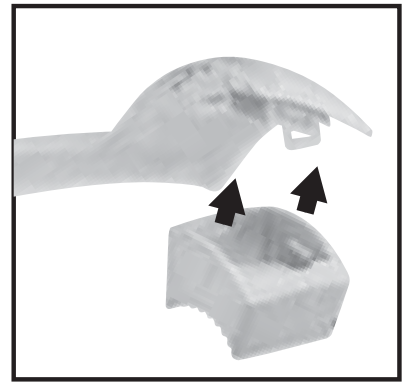


INSTRUCCIONES DE CARGA

NOTA: las baterías vienen descargadas. Antes del primer uso, deberá cargar las baterías durante 24 horas. Para asegurar un rendimiento óptimo, permita que las baterías se descarguen completamente, y luego cargue el aparato 3 veces antes del primer uso.

1. Asegúrese de que el aparato esté debidamente ensamblado.
2. Conecte el cable a la base de carga.
3. Coloque el rallador sobre la base de carga, cerciorándose que encaje debidamente sobre ella.
4. Conecte el cable a una toma de corriente de 120V AC (60 Hz).
5. El indicador luminoso rojo se encenderá, lo que indica que el aparato está cargando. Si la luz no se enciende, retire, y luego vuelva a posicionar el aparato sobre la base de carga.
6. Si esto no soluciona el problema, averigüe que el cable está debidamente conectado a la base de carga.

FAMILIARÍCESE CON SU RALLADOR MULTIUSO

1. Mango
2. Cuerpo
3. Tambor triturador
4. Tambor rebanador
5. Tambor rallador
6. Empujador
7. Base de carga/ almacenaje
8. Luz de carga
9. Lado izquierdo de la cubierta de la tolva
10. Tolva
11. Lado derecho de la cubierta de la tolva
12. Cubierta del tambor

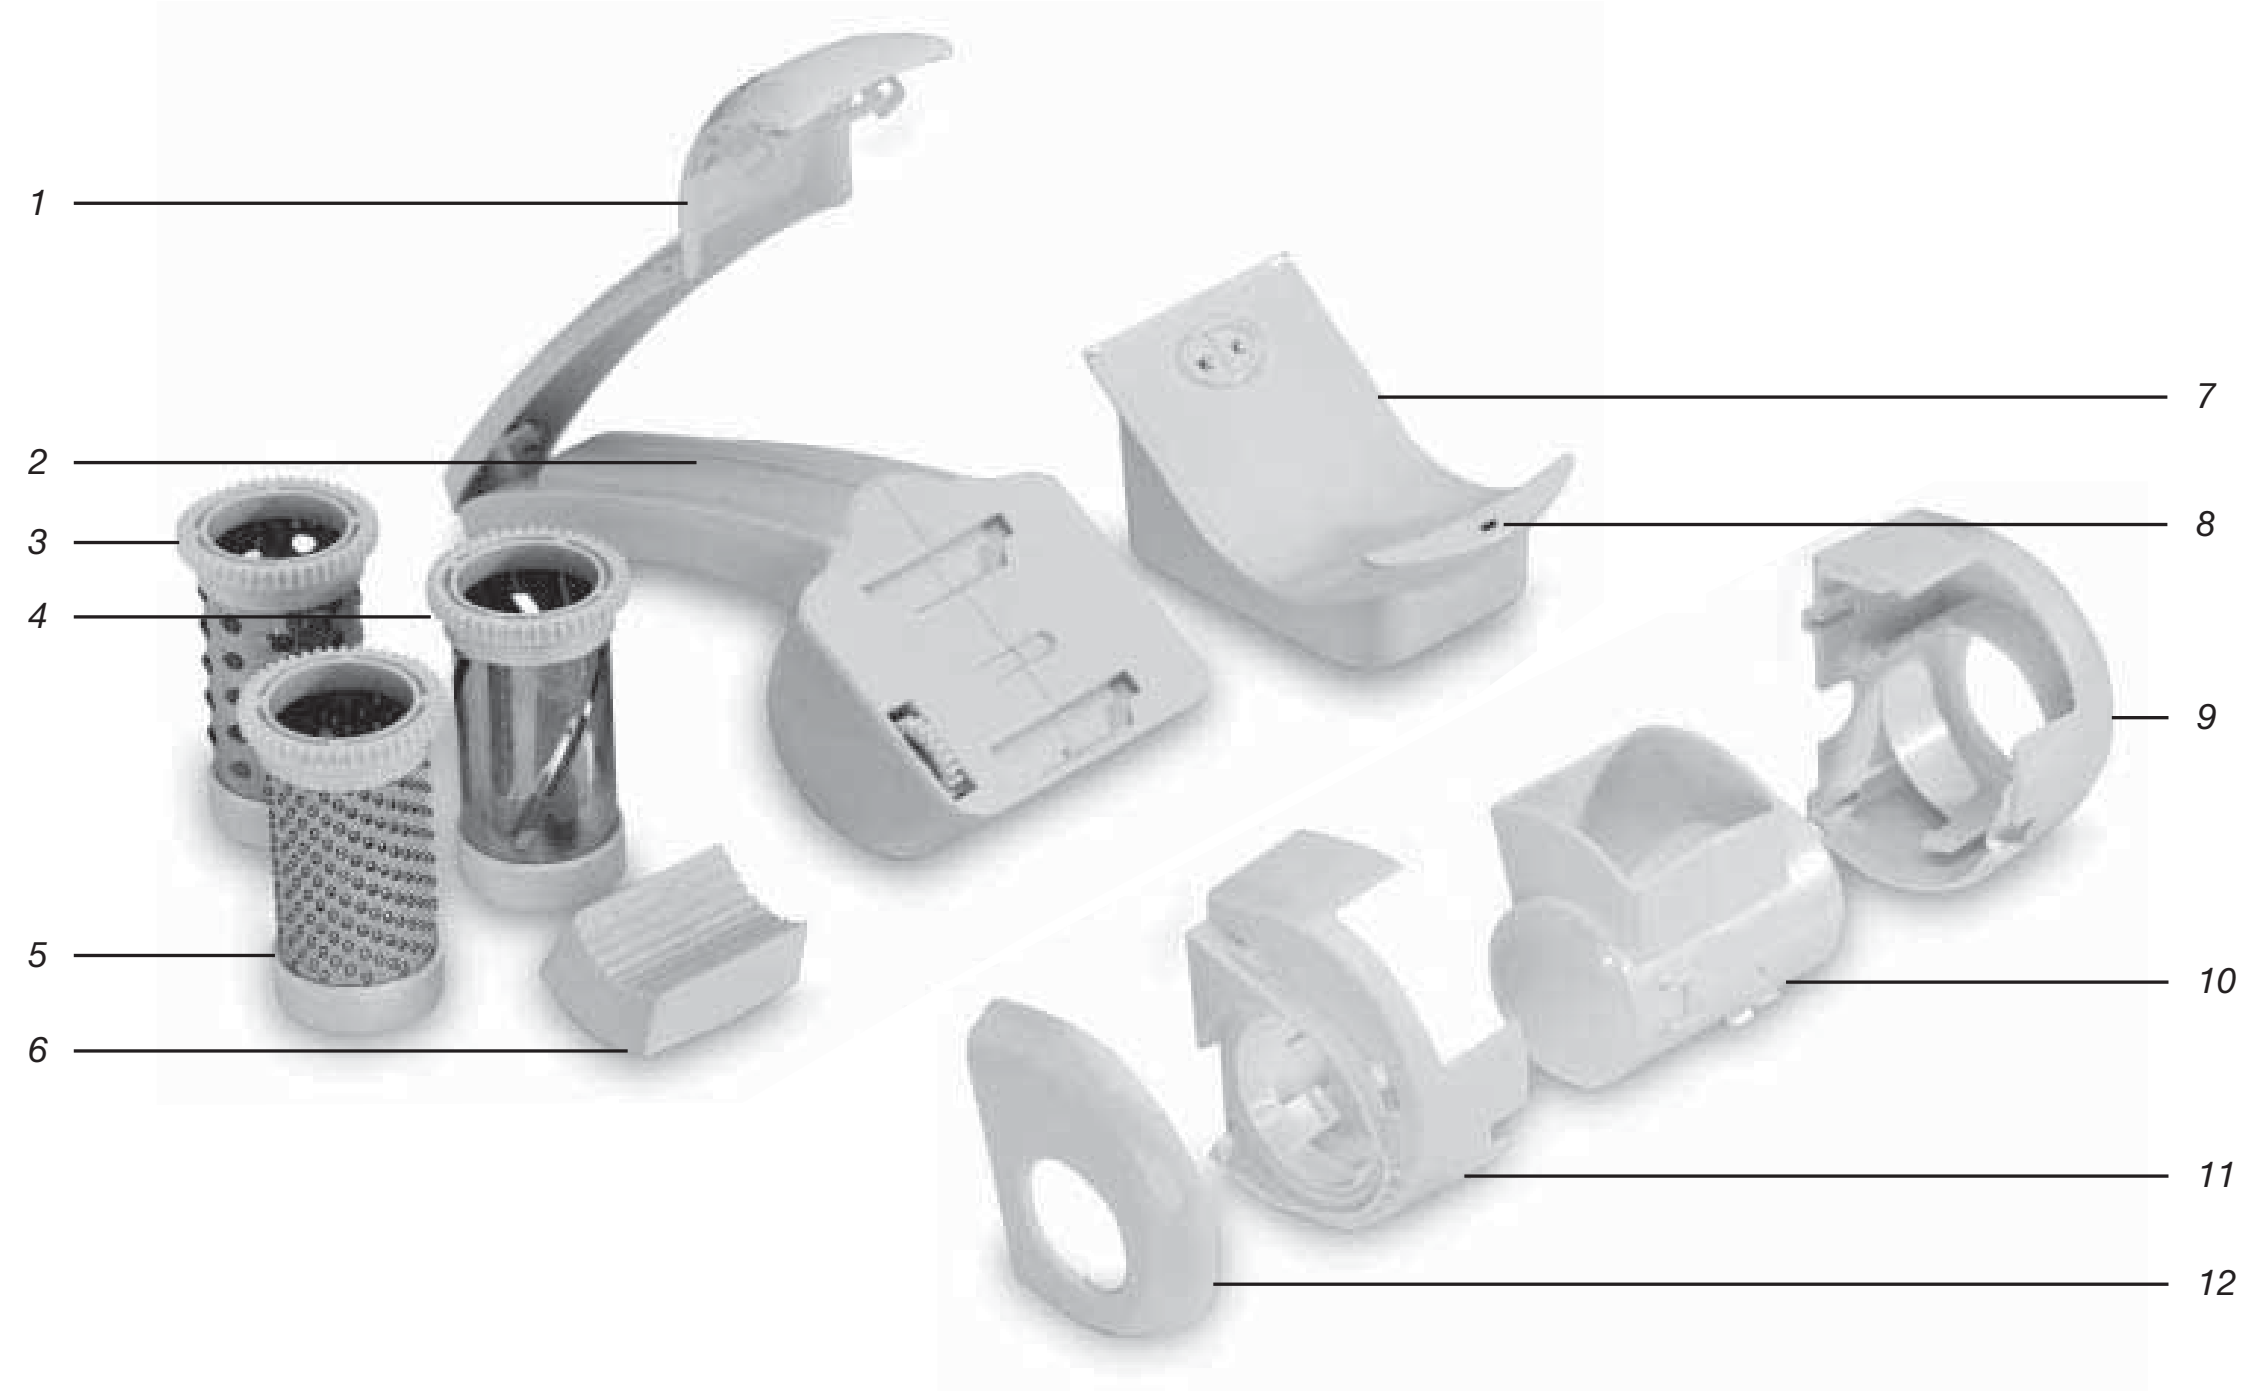

PRECAUCIÓN

No desarme el aparato; esto invalidará automáticamente la garantía.

La potencia nominal máxima está basada en el accesorio que consume más electricidad. Otros accesorios pueden utilizar menos electricidad.

CONSEJOS DE SEGURIDAD ADICIONALES

1. No intente desarmar el aparato o la base de carga; esto invalidará automáticamente la garantía.
2. Las baterías no son sustituibles. Deben ser recicladas, según las leyes vigentes, al final de su vida útil. (véase la sección "Reciclaje de las baterías")
3. No encienda el aparato mientras está sobre la base de carga; esto puede provocar daños e invalidará la garantía.
4. Abra el mango antes de instalar/retirar accesorios a fin de evitar encender el motor sin querer.

SEGURIDAD DEL CONSUMIDOR

Este producto contiene un transformador homologado por UL. NO tire el aparato o las baterías a la basura. NO desarme, aplaste ni perfore la batería.

PIEZAS Y CARACTERÍSTICAS

1. Operación inalámbrica

¡Sin cable! Funciona con baterías recargables.

2. Fácil de cargar

a. Las baterías recargables no necesitan removerse para cargar.

b. La base de carga se conecta directamente a la toma de corriente.

c. La base de carga/almacenaje permite recargar y guardar la unidad de manera elegante. Una vez cargadas las baterías, el rallador multiuso tiene una autonomía de hasta 20 minutos – rallar la mayoría de los alimentos requiere tan sólo 5–10 segundos.

3. Diseño cómodo

El rallador multiuso ha sido diseñado para que pueda rallar, rebanar y triturar sus ingredientes favoritos más fácil y rápidamente. La forma del mango proporciona un control cómodo y un alcance fácil al botón de encendido.

4. Botón de encendido/apagado

Mantenga oprimido el botón de encendido/apagado para encender el rallador. Suelte el botón para apagar el motor. Para lograr resultados óptimos, utilice pulsaciones cortas.

5. Multifunción: ralla, rebana y tritura

El rallador multifunción recargable/inalámbrico Cuisinart® le permitirá triturar vegetales, rebanar frutas y rallar su queso favorito o chocolate en segundos, simplemente cambiando el tambor.

6. Tolva extragrande

La tolva acomoda pedazos de alimentos grandes, para un servicio interrumpido.

ÍNDICE

MEDIDAS DE SEGURIDAD IMPORTANTES

Siempre que use aparatos eléctricos, debe tomar precauciones básicas de seguridad, incluso las siguientes:

1. **LEA TODAS LAS INSTRUCCIONES**
2. Para reducir el riesgo de incendio, electrocución o herida, no sumerja la base de carga, el cable o la clavija en agua u otro líquido.
3. No haga funcionar el aparato en la presencia de vapores explosivos o inflamables.
4. Desconecte la base de carga de la toma de corriente antes de limpiarla.
5. Conecte la base de carga en una toma de corriente alejada del fregadero o de superficies calientes.
6. No utilice el aparato para ningún otro fin que no sea el indicado.
7. No utilice este aparato si el cable o la clavija estuviesen dañados, después de que hubiese funcionado mal o que se hubiese caído o si estuviese dañado. Regrese el aparato a un centro de servicio autorizado para su revisión, reparación o ajuste.
8. El uso de accesorios no recomendados o proveídos por Cuisinart presenta un riesgo de incendio, electrocución o herida.
9. Para uso doméstico solamente; no aprobado para uso comercial o industrial.
10. Este aparato está equipado con baterías recargables de níquel e hidruro metálico (NiMH), las cuales deben reciclarse según las leyes vigentes al final de su vida útil. (véase la sección "Reciclaje de las baterías") No queme ni coloque las baterías en un compostador, ya que pueden explotar por el calor.
11. No queme el aparato, aunque esté muy dañado; las baterías pueden explotar al calentarse.
12. Las baterías pueden tener fugas bajo condiciones extremas. Si el líquido adentro de las baterías (el cual es una solución de 20–35% de hidróxido de potasio) entrara en contacto con la piel, (1) lave la piel rápidamente con agua y jabón y (2) neutralice la acidez de la piel con jugo de limón o vinagre. Si el líquido entrara en contacto con los ojos, enjuáguelos inmediatamente con abundante agua durante 10 minutos o más y busque atención médica.
13. Supervise el uso de este aparato cuidadosamente cuando esté usado por o cerca de niños.
14. Apague el aparato antes de instalar/remover piezas.
15. Evite el contacto con las piezas móviles. El rallador multiuso Cuisinart® está diseñado con una abertura grande. Mantenga las manos y los dedos alejados del tambor giratorio durante el funcionamiento.
16. Las cuchillas son muy filosas; manipular con sumo cuidado. Siempre sostenga los tambores por las extremidades de plástico.
17. No lo utilice en exteriores. No utilice una extensión con este aparato. Conecte el cargador directamente a una toma de corriente. Utilice el adaptador sector y la base de carga proveídos únicamente. No intente utilizar la base de carga con otro producto. Tampoco intente cargar este producto con otra base de carga.
18. No permita que el cable cuelgue del borde de la mesa o de la encimera. No permita que el cable haga contacto con superficies calientes.
19. No haga funcionar el aparato bajo o adentro de un armario. Siempre desconecte el aparato antes de guardarlo en un armario. Dejar el aparato conectado presenta un riesgo de incendio, especialmente si éste toca las paredes o la puerta del armario cuando cierra.

GUARDE ESTAS INSTRUCCIONES PARA USO DOMÉSTICO SOLAMENTE

Cuisinart®

MANUAL DE INSTRUCCIONES



BC

Rallador multiuso recargable/inalámbrico

CMG-20

Para su seguridad y para disfrutar plenamente de este producto, siempre lea las instrucciones cuidadosamente antes de usarlo.

Version no: CMG20 IB-10463-ESP

Size: 148 mm (W) X 210 mm (H)
Total Pages: 24 pps

Material:
Cover: 105 gsm gloss artpaper
Inside: 105 gsm gloss artpaper

Coating: Gloss varnishing in cover

Color:
Cover: 4C+1C(K)
Inside: 1C+1C(K)

Die cut:

Bar Code:

Date: 05/24/14 (00)

Coordinator: Astor You / Andy WS Chan

CHUNG TAI PRINTING HOLDINGS LTD.
中大印刷集團有限公司
Tel: 2669 6173 Fax: 2677 6556

C M
Y K